

Installation guideline for flat tongue & groove and overlap products





LUNAWOOD FLAT TONGUE & GROOVE AND OVERLAP PRODUCTS

Guideline for installation of flat tongue & groove and overlap products

Installation for under 140 mm wide tongue & groove products

Installation for 140 mm and wider tongue & groove products

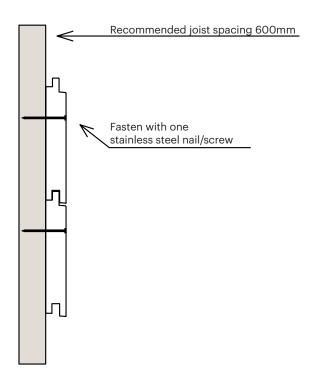

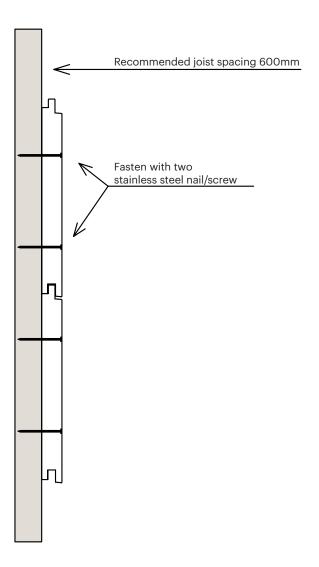






LUNAWOOD FLAT TONGUE & GROOVE AND OVERLAP PRODUCTS


Guideline for installation of flat tongue & groove and overlap products

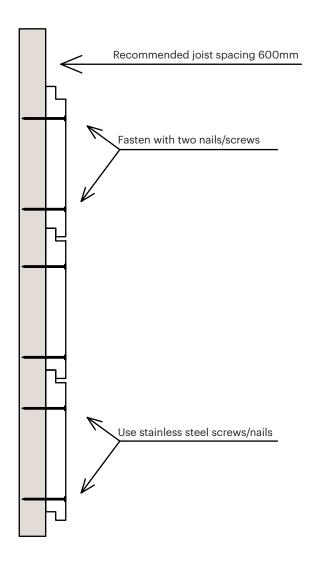






General board joint guideline

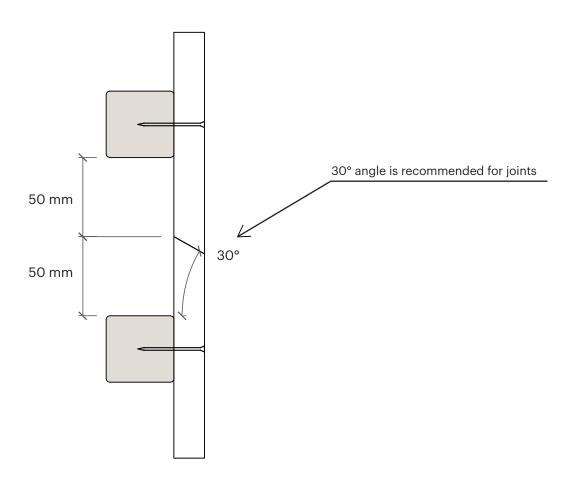

Fasten nails/screws to the correct depth

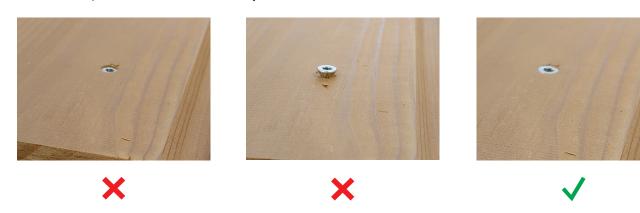

This brochure is provided for informational purposes only and no liability or responsibility of any kind is accepted by Lunawood or its representatives, although Lunawood has taken reasonable efforts to verify the accuracy of any advice, recommendation, or information. Lunawood reserves the right to alter its products, product information and product range without prior notice.

